

Add/Change SMTP Settings

Access the SMTP Settings in the Network Settings

- 1. Press [Utility/Counter]
- 2. Touch [Admin. Management]
- 3. Enter the administrator password
 - a. Default password is 12345678
- 4. Touch [Enter]
- 5. Touch [Admin.2]
- 6. Touch [Network Settings]
- 7. Touch [SMTP Settings]

Utility/Counter
Administrator Management Enter
Admin.1 Admin.2
Memory Free 100%







Network Setting	Enter
Basic Settings	DNS Settings
Machine Name	SMTP Settings
POP3 Settings	Priority Compress
Scanner Settings	LDAP Setting
Frame Type Set	IP Filtering
	Memory Free 100%



Enter/Change SMTP Settings

Enter SMPT Settings in the Network Settings

Basic SMTP Settings

- 1. Touch [SMTP Server Address]
 - a. Enter the SMTP Server Address
 - i. If you are using a hostname, touch [Hostname] and enter the desired host name and touch [Enter]
 - b. Touch [Port] and enter the SMTP port used (default is 25)
 - c. Touch [Enter]

SMTP Settings Cancel Enter	Enter SMTP Server Address.
	Utility/Counter
SMTP Server Address . . . E-Mail Address	SMTP Server Address Cancel Enter
	Host Name Port
Memory Free 100%	Memory Free 100%

- 2. Touch [Email Address]
 - a. Enter the email address of the machine and touch [Enter]
- 3. Touch [Enter]



4. Press the yellow reset key



Authenticated SMTP Settings (username/password)

- 1. Touch [SMTP Server Address]
 - a. Enter the SMTP Server Address
 - i. If you are using a hostname, touch [Hostname] and enter the desired host name and touch [Enter]
 - b. Touch [Port] and enter the SMTP port used (default is 25)
 - c. Touch [Enter]

SMTP Settings	Cancel Enter
SMTP Server Address	ה
E-Mail Address	
SMTP Authentication User Name	
SMTP Authentication Password]
	Momony
	Eree 100%

Enter SMTP Server Address.
Utility/Counter
SMTP Server Address Cancel Enter
Host Name, Port Delete Executiv 100%

- 2. Touch [Email Address]
 - a. Enter the email address of the machine and touch [Enter]

SMTP Settings Cancel Enter	E-Mail Address Cancel Enter
SMTP Server Address E-Mail Address SmTP Authentication User Name SMTP Authentication Password Memory 100%	Lest01@test.local @ Q W E R T Y U I O P A S D F G H J K L Domain Z X C V B N M Alpha Caps

- 3. Touch [SMTP Authentication User Name]
 - a. Enter the SMTP authentication user name and touch [Enter]

SMTP Settings Cancel Enter	SMTP Authentication Cancel Enter
SMTP Server Address	Lest01 @QWERTYUIOP ASDFGHJKL ZXCVBNM SPACE
Memory Free	Alpha Caps Memory 1009

- 4. Touch [SMTP Authentication Password]
 - a. Touch [New Password] and enter a password.
 - b. Touch [Confirm New Password] and enter the password.
 - c. Touch [Enter]

SMTP Settings	Cancel Enter
	_
SMTP Server Address	<u></u>
E-Mail Address]
SMTP Authentication User Name	<u>]</u>
SMTP Authentication Password	<u>]</u>
	Memory Free 100%

Change password.	
Utility/Counter	
Change Password Can	Icel Enter
New Password	
Confirm New Password	
	Memory 100%

- 5. Touch [Enter]
- 6. Press the yellow reset button