

Set Up User Authentication

PLEASE NOTE: These instructions are for user authentication. This means that users must enter a password/username to use the copier. User Authentication DOES NOT keep track of copies/prints a user does. **That requires Account Tracking.** If account tracking is what you need, then please call the office for proper instructions.

1. On the copier's control panel, press [Utility/Counter]
2. Touch [Admin. Management]
3. Enter the password (default is 12345678 OR 00000000) and touch [Enter]
4. Touch [Admin 1]
5. Touch [Account/User Authentication]
6. Touch [General Settings] Touch [Account/User Authentication]
7. Touch [On (MFP)] and then touch [Enter]
8. If you want users to require username/password to print
 - a. Touch [Allow Print Without Authentication]
 - i. [On] -> Public user can print without password/username
 - ii. [Off] -> Password/Username is required to print
 - b. Touch [Enter]
9. Select [Yes] and then [Enter] to initialize authentication/account track settings
10. The copier will re-boot
11. Follow the instructions for **Adding a User**

